

### 6.Items For Attention :

- 1、 The system must be erected by qualified technical person and the leakage switch shall be mounted in place of easy control .
- 2、 It must be connected firmly during erection .In the case of loss due to improper earthling ,the manufacturer will not assume any responsibility .
- 3、 The motor must be erected flatly and stably and the shell shall be firmly earthed .
- 4、 The whole set is usually under standby state. If it is not used for long time, please pull off the master power switch.
- 5、 During erection, it is required to consider load capacity of power supply circuit, otherwise it may influence the normal working of the system or cause accident.
- 6、 During erection, all the electric appliances and electric parts shall be provided with moisture resistant measures.
- 7、 Each LED control panel light twinkle automatically when this function is operating.

# User's Guide

### IMPORTANT:


Read this manual before proceeding with installation of the bathtub and keep it with the other accompanying documents.  
This manual is valid for the installation of tubs both with and without whirlpool.

**MODEL:M-1309**


**SIZE:2000X1200X620mm**




Install the diagram

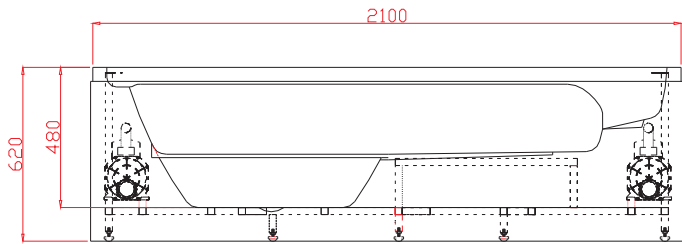


Plane chart

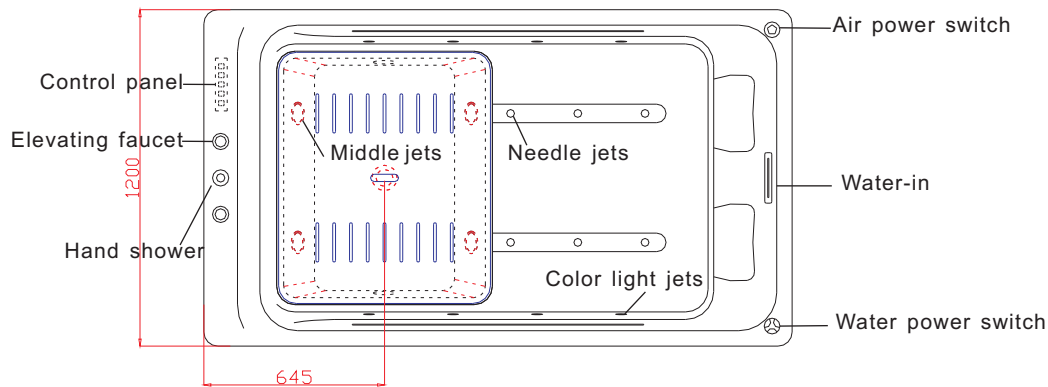

Tap takes over sketch

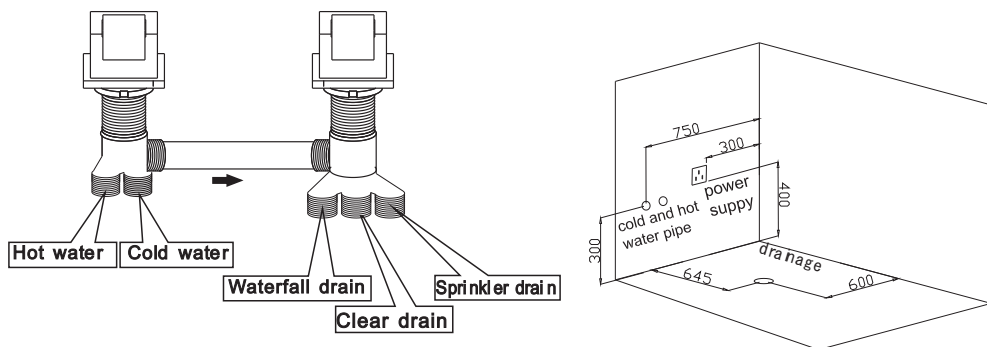

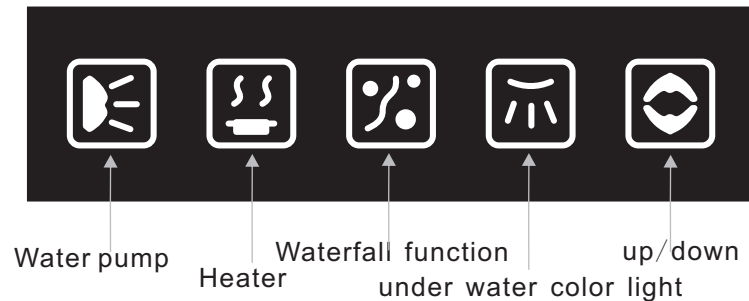

4. CONTROL PANEL DESCRIPTION:





5. Function operational specification:


1. Whirlpool massage function: this function is protected by the water shortage protection function, only the water volume in the bathtub should reach certain level, the water pump can start.

Press the (  ) button, the water pump turns on, the water pump will turn off automatically for keeping working during 60 min each time.

2. Heater: this function is limited by the water pump function, only the water pump is turned on, the heater can be turned on. The heater will be turned off automatically when the whirlpool massage function is turned off. Press the (  ) button, the heater can be turned on or turned off.

3. Waterfall function: Press the (  ) button, the waterfall function can be turned on or turned off. The pump will turn off automatically for keeping working during 60 min each time.

4. Under water color light: Press the (  ) button, the light can be turned on or turned off.

5. Elevating faucet and sprinkler: Press the (  ) button, the faucet and sprinkler can be moved up or down.

## 1.Functions(WS-03)


NO.	Functions	Available
1	Touch sensitive control panel	✓
2	whirlpool massage function	✓
3	Waterfall function	✓
4	Under water color light	✓
5	Heater	*

Remark : the function with "✓" means the standard function, and the function with "\*" means the optional function.

## 2.Technical parameters:

1. Power supply : AC220V±10% 50-60Hz
2. Pump load ① : AC220V ≤1500W
3. Pump load ② : AC220V ≤1100W
- 4.Heater power : AC220V 2000W
- 5.Under water lamp load:AC12V 10W
- 6.Jacking motor : AC12V 40W
- 7.Dielectric strength:1500V/5MA 1mineach
- 8.Leak current : <0.25mA
- 9.Waterproof grade : IPX4

## 3. CIRCUIT DIAGRAM

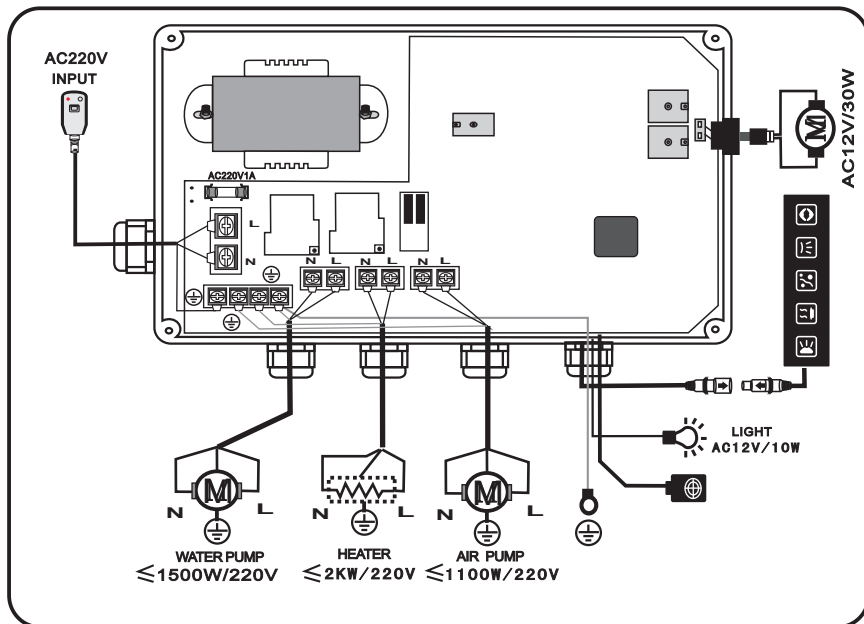

## Elektrisk installation

Produkt	Strøm	Frekvens (Hz)	Forbrug (W)	Ampere
Spa uden varmelegeme	230V - 1 fase	50 - 60 Hz	1200 W	10 Amp
Spa med 3 kW varmelegeme	230V - 2 faser	50 - 60 Hz	4200 W	16 Amp
Spa med 6 kW varmelegeme	230V - 3 faser	50 - 60 Hz	7200 W	16 Amp

Alle elektriske tilslutninger i forbindelse med installationen af produktet skal udføres af en autoriseret professionel elektriker.

2.4

## 3、 Water supply device

- 3.1 This device's hydraulic pressure is 0.2-0.4Mpa.
- 3.2 The water supply characteristics on the wall: The cold or hot water supplies inside the bathroom also establish in the shelter of the massage tub, use the hose to connect with the cold or hot joint of the tub. the pipe towards is decide by the customer, the machine do not go with the hose.

## 4、 Installation introduction

- 4.1 Before install, must consider the place of install massage bathtub whether can support this device's pressure.
- 4.2 Place the massage bathtub on the install position, adjust level to make the drain system smooth.
- 4.3 Adjust the leg's screw to make sure all of the screw touch ground completely.
- 4.4 Install the drain hose, and make some measure to against on the connector.
- 4.5 Fix cold and hot water-pipe well, then install the showerhead. And then put drain into downcomer, finally connect with power and make sure whether device connected with ground can work.

## 5、 Using Method

- 5.1 Turn on faucet, adjust water's temperature, add water to the massage bathtub.when the highest water level exceed the highest nozzle about 20-30mm and reach the detector, press the switch button to let the electric machine.
- 5.2 Revolve the adjust switch ,and choose the proper surf pressure.
- 5.3 After finishing if should turn off pump at first, then open drain button,when water is all out , please make a clean of bathtub to keep in good.

## 6、 Clean and keep in good condition

- 6.1 usually use soft cloths and general liquid cleanser can wash away dirt , but forbid to use the cleanser with acetone or the ammon ia composition;when disinfect, forbid to use the disinfectant contained the formaldehyde.
- 6.2 the dirty spot of surface can use the toothpaste to wipe with the soft cloth .
- 6.3 to the low-grade chafe of the surface or burned by cigarette, can soak in water to whet with 2000# levigation sand paper, then polishing.
- 6.4 If the electroplate piece contain stain, use the soft cloth to wipe lightly, avoid to wiping with coarse cloth.
- 6.5 often clean up the backwater net cover, prevent it from stop;

- 6.6 Check whether have break on pipe and waterway aperiodically.
- 6.7 Please check whether there is fall off or breakage on wire, switch, connector plugs so that repair in time.
- 6.8 In order to keep to use in a long term ,please remember, don't use more than 3 hours continually.

**7、Fault eliminate**

Fault	Cause	Way
Machine or equipment doesn't work	Voltage unstable	Check circuitry
	Power connector didn't connect well or open circuit	Insert again or change power line
	The windpipe connect air switch fall off or break	Connect again or change
	The air switch failure	Change
Big nose of machine	Power's parameter is not same as nameplate	Connect with supplier
	Fixed screw did'n fix or fall off	Fix tightly again
	Support's leg screw did not touch ground	Adjust
water pipe leak out	Aging	Change
	The joint did not fix well	Fix again
	Water pipe or accessory leak	Change

Remark: except this fault, please according to situation to resolve, or find experienced people to repair.

**8、special remind**

- 8.1 please find qualified people to install bathtub according to introduction.
  - 8.2 when you are using it, first of all you have to inject the cold water and then inject the hot water. Don't inject the hot water first.
  - 8.3 bathtub's machine must connect on ground, support must use 1.5mm<sup>2</sup>yellow/green double wire connect with ground and check whether effective.
  - 8.4 please do not turn on machine without water, before draining should turn off machine.
  - 8.5 children should be looked after in bathtub.
  - 8.6 bathtub's temperature can't higher than people average temperature, and the best is 32-37centigrade.
  - 8.7 after shower ,please cut off power.
  - 8.8 if have these situation ,please do not enter into massage bathtub.
    - 8.8.1 younger than 4 years old's child;
    - 8.8.2 blood circulation unstabled people;
    - 8.8.3 sot;
    - 8.8.4 suffer from flu;
    - 8.8.5 heart disease;
    - 8.8.6 already have sauna;
    - 8.8.7 after meal in half a hour;
- Remark: our company has the right to modify the above mention without further notice.

**Bathtub User's Guide**

**WARNINGS**

1. Please follow the instruction contained in the attached installation manual to ensure that the product is installed properly. the manufacturer will not be held liable for damages or injuries caused by improper installation.
2. Follow the instructions contained in this manual when using the product.
3. Before using the bathtub, check the local voltage that if reach to the rated voltage(pre-installation card).

**CONTENTS**

- 1.Functions(WS-03)
2. Technical parameters
3. CIRCUIT DIAGRAM
- 4.CONTROL PANEL DESCRIPTION
- 5.Function operational specification:
- 6.Items For Attention